

UFO Ballistic NailScrews® for Treated Lumber

Cdn. Pat. [2,648,647] / US Patent #9,291,183 B2, #10,865,824 B1, & Other Patents Pending


Screws that install with a pneumatic nailer.



T-15 Star Drive



Combo Drive™
#2 PH & #1 SQ or
#2 PH & #2 SQ

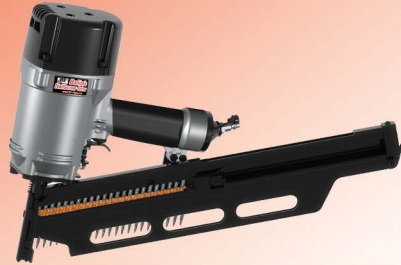

21° or 34° Plastic Strip:

1¾", 2", 2¼", 2½", or 3"

.113 Diameter

T-15 Star or




Combo Drive™ Flat Head
1,000 per Box

21° Part # PTHDNS134113PH, PTHDNS200113SP,
PTHDNS214113TH, PTHDNS212113SP, & PTHDNS300113SP

34° Part # PTPSNS212113SP & PTPSNS300113SP

Other sizes, coatings, & heads available.

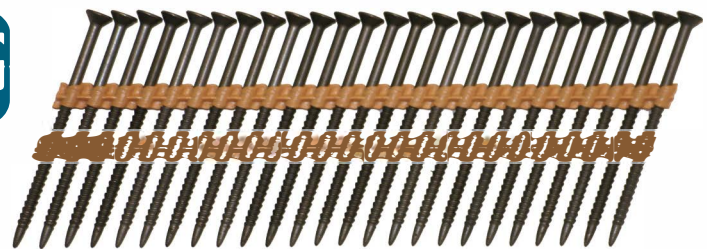

15° Wire Coil:

1¾", 2", 2¼", 2½", or 3"

.113 Diameter

T-15 Star or

Combo Drive™ Flat Head
800 per Box




Part # PTWCNS134113SQ, PTWCNS200113SP,
PTWCNS214113TH, PTWCNS212113SP, & PTWCNS300113SP

Other sizes available.

UER-0133



IBC & IRC Recognized

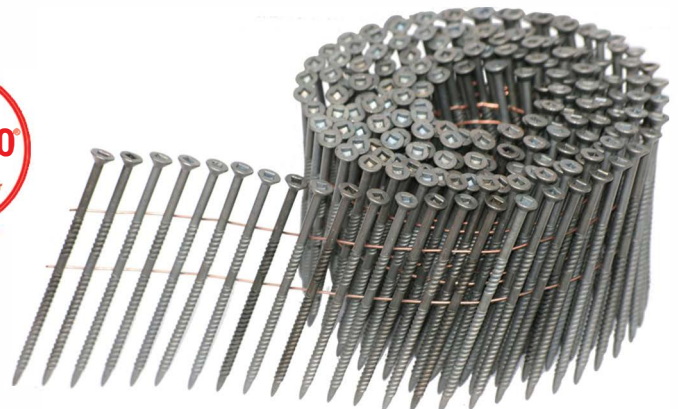

Ask about our full line of code
recognized (IAPMO #0133)
NailScrews® for subfloor.

For technical information,
visit NAILSCREWS.COM.

Using UFO Ballistic NailScrews® with Treated Lumber

Cdn. Pat. [2,648,647] / US Patent #9,291,183 B2, #10,865,824 B1, & Other Patents Pending

TOOLS:

PLASTIC STRIP: Most 21° strip framing nailers including UFO nailers, Metabo (Hitachi), Senco, & Bostitch.



Most 34° paper strip nailers including UFO nailers, Metabo (Hitachi), Senco, & Paslode F350S, PF350S, & CF325Li.



WIRE COIL: Most 15° wire coil nailers including UFO nailers, Metabo (Hitachi), Senco, & Bostitch.



TIPS:

- ⊗ Leave ¼" to ⅜" spacing between deck boards to allow for expansion and contraction to avoid fastener failure.
- ⊗ Test at 110 pounds of air pressure at the tool.
- ⊗ Establish and maintain consistent air pressure during installation.
- ⊗ Use a pneumatic nailer with the capability of adjusting the depth of drive.
- ⊗ Use no-mar tips on your pneumatic nailer.
- ⊗ Most Ballistic NailScrews® require smaller diameters than regular bulk screws since they are installed with only a slight turning motion.
- ⊗ Cedar and Redwood contain tannin that can cause streaking.
- ⊗ If removal is necessary, go slowly the first two revolutions while the threads are cutting into the wood fibers.
- ⊗ Always wear safety glasses and protective gear while installing Ballistic NailScrews®.



For technical information and compatible nailers, visit NAILSCREWS.COM.